

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

NOTICE:

Fuelpak is intended for racing use only, and is not legal for sale or use in California on pollution-controlled vehicles.

TOOLS NEEDED

- #1 & #2 Phillips Screwdriver
- 4 & 5 mm Allen Wrench
- Less than 2 hours



**Suzuki C90
Fuel Injected Models**


INSTALLATION INSTRUCTIONS FOR P/N 62007

INTRODUCTION: Congratulations on your purchase of the Fuelpak Fuel Management System for fuel injected Suzuki C90 motorcycles. Please take the time to read the entire instruction manual before attempting to install. DO NOT adjust the Fuelpak until you have thoroughly read the instruction manual and the unit is fully installed. If you have questions, please call (562) 921-0071.


SUMMARY: To achieve the optimum performance from your application, it is recommended that you install a high performance air filter in conjunction with this unit. The Fuelpak will be installed in-line with the factory injector wiring and the lower throttle position sensor. The Fuelpak will be tucked under the seat next to the battery with the cables routing to the left side of the engine.

PLEASE NOTE: FUELPAK USE REQUIRES A HIGH PERFORMANCE AIR FILTER.

1. Remove seat and front side covers.
2. Remove air box covers, instrument panel and air box. We highly recommend you consult the factory service manual for proper removal.
3. Route wiring harness from front right side cover along top right frame rail. (Fig. 1)
4. The Fuelpak harness includes two sets of two connectors. Route one set to the rear injector area. Disconnect the factory connector from the rear injector and connect to Fuelpak connector. Connect second Fuelpak connector to injector. The Fuelpak is now wired in-line between the factory ECU and the fuel injectors. (Fig. 1)
5. Repeat process with front injector.
6. Route black and green wire to frame connection as shown. (Fig. 1)
7. Attach t-tap to blue and black wire from ECU (4th wire down on right side of ECU). Route violet wire along top left frame rail and attach to t-tap. (Fig. 2)
8. Attach Fuelpak to Fuelpak harness and tuck inside area covered by front right side cover.
9. Follow the service manual to reinstall the air box, air box covers and instrument panel.

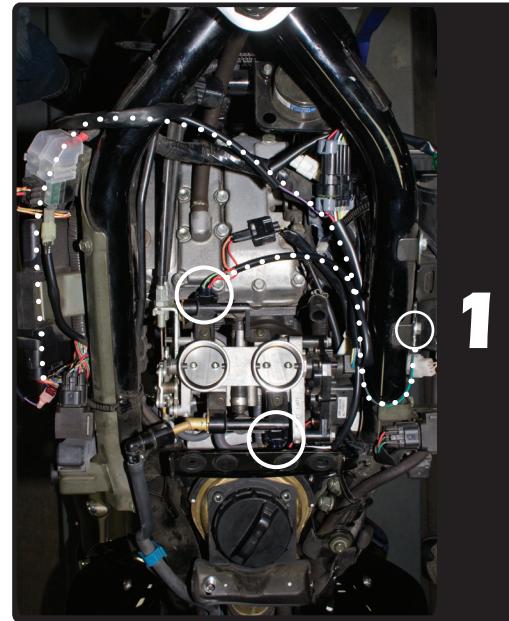

HOW IT WORKS

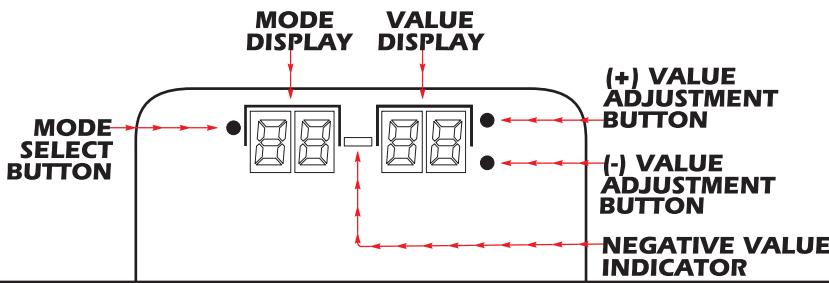

ENTERING VALUES

1. Remove Fuelpak clear case cover by removing all four screws, **save hardware**.
2. Turn on **main** power and start engine. Fuelpak display should light up, if not, turn power off and verify the connectors are fully seated.
3. Refer to Fuelpak Setting Reference to locate the Setting Values specific to your bike and exhaust system. If you do not find your setting, visit fuelpakfi.com or call tech support at (562) 921-0071.
4. Starting with mode 1 selected, press the value (+) or the value (-) buttons to input the correct value as indicated in your Setting Value. After entering your first value, press the mode select button to move to mode 2 and enter the value. Continue until you have entered the value for each of the first 18 mode positions. Each time the value (+) is pressed, the value increases by one number. Each time the value (-) is pressed, the value decreases by one number. (Please refer to the "How It Works" section directly above if you have questions about this step.)
5. Press the mode select button to move to mode 21 and verify that it reads less than 10 with the throttle closed and that the numbers increase as you roll on the throttle.
6. Enter any other mode values as required for your application.
7. Turn off power.
8. Reinstall clear cover on Fuelpak module then tuck inside front right side cover area and reinstall front right side cover.
9. You are now ready to ride.

IN THE EVENT OF A MALFUNCTION, PLEASE CHECK THE FOLLOWING

TECH SUPPORT

1. Turn off main and handlebar switches then verify all connectors are fully seated.
2. Be sure setting values are correct for your application.
3. Verify throttle calibration, step 5 in Entering Values.
4. Check harness for cuts, scrapes or abrasions.
5. Make sure the battery is fully charged and the charging system is operating correctly.
6. Call technical support at (562) 921-0071

WARRANTY INFORMATION

WARRANTY: Your Fuelpak unit is warranted against defects in materials and workmanship for the period of 90 days from the original retail purchase. In the event of an alleged defect in material or workmanship, Fuelpak's responsibility is strictly limited to repair or replace the defective product. Fuelpak shall not be responsible for (a) labor, transportation, or other incidental charges; (b) consequential or other damages incurred by use of any product. Fuelpak offers no other warranty beyond this limited warranty. This limited warranty does not apply to products which have been (a) modified or altered in any way; (b) subjected to adverse conditions, such as misuse, neglect, accident, improper installation

or adjustment, contaminants, corrosion, or faulty repair; or (c) used in applications other than those recommended by Fuelpak. To initiate a warranty process, the consumer must first call technical support to receive a return authorization number. The product must be returned to Fuelpak complete with a dated receipt and a return authorization number.

Fuelpak
Attn: Warranty Claims
13861 Rosecrans Avenue
Santa Fe Springs, CA 90670
(562) 921-0071